



CLAIL1092AS

1

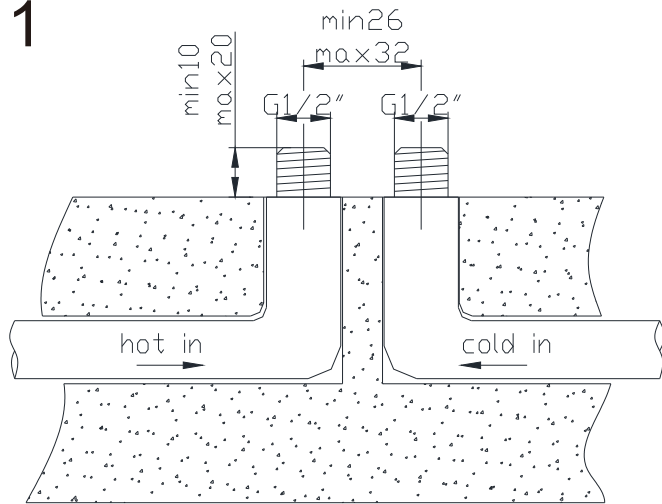


1. Pre-bury the water pipes under the ground, hot in (left), cold in (right).

2

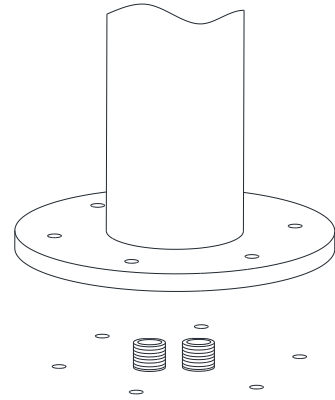


2. Drilling holes on the ground.

3

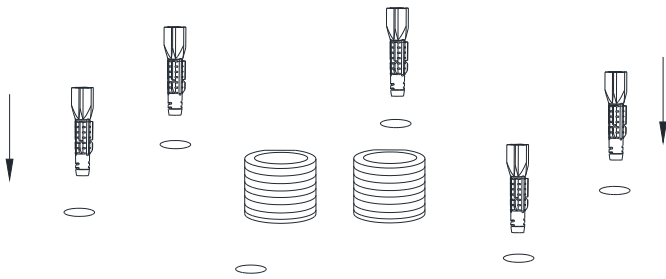


3. Put the drywall anchors in the holes drilled.

4

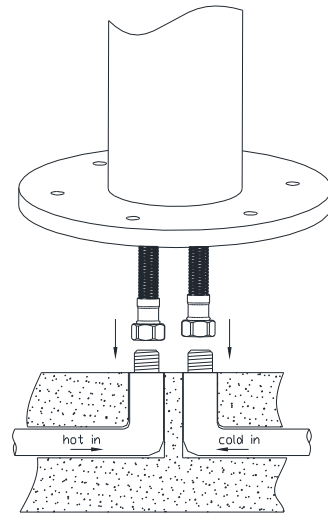

4. Screw the hoses to the connectors of the water pipes.

5

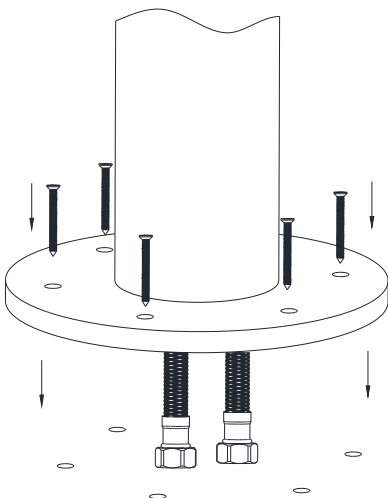

5. Fix the base on the ground by screws.

6



6. Done.